



EVOTECH®
P E R F O R M A N C E

Installation Instructions





KAWASAKI Z1000 CRASH PROTECTION

Product Reference - 12742

Kit Contents


- Ⓐ 2 x Bobbin Heads
- Ⓑ 2 x Bobbin Spacers
- Ⓒ 2 x M10 - 120 x 1.25 Cap Head Bolts
- Ⓓ 2 x M10 Washers

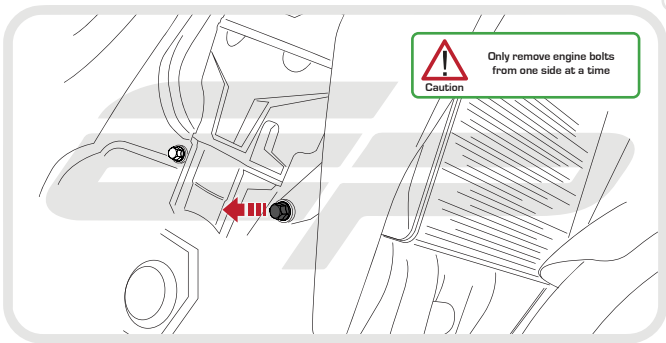

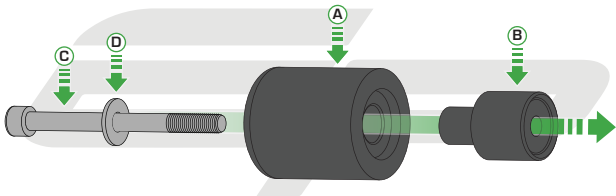



Manufacturers Torque
Specification
(Nm)

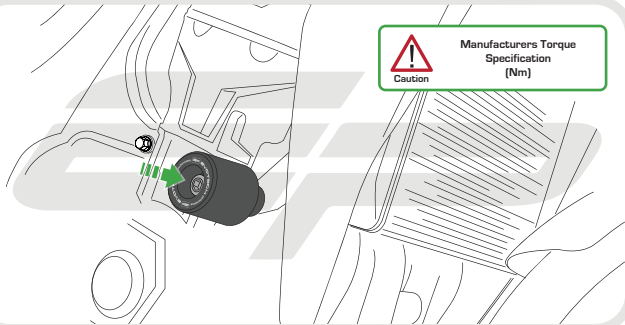



EVOTECH[®]
P E R F O R M A N C E



Caution

Only remove engine bolts
from one side at a time

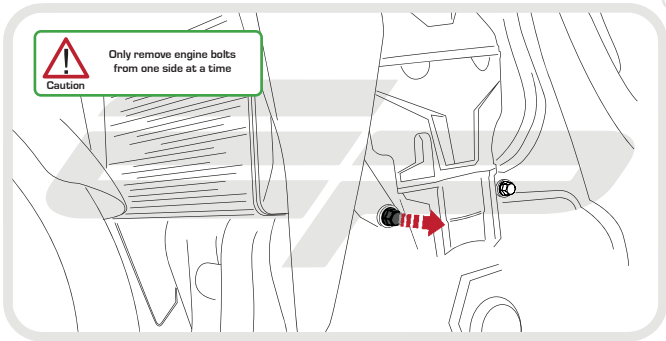

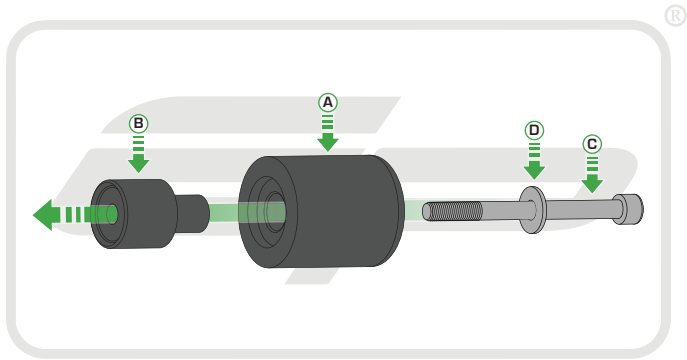



Caution

Manufacturers Torque
Specification
(Nm)





ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH[®]
P E R F O R M A N C E

www.evotech-performance.com