



EVOTECH®
P E R F O R M A N C E

Kawasaki Z125/250
Crash Protection

Installation Instructions



Kit Contents PRN012882


- (A) 1 x M10 Spindle
- (B) 2 x Bobbin Heads
- (C) 2 x Bobbin Spacers
- (D) 2 x Impact Absorbant Washers
- (E) 2 x M10 Washers
- (F) 2 x M10 Nyloc Nuts





Caution

When removing main engine bolt, frame spacers will drop out of place. Ensure the right and left ones are kept separate to re-fit at a later stage



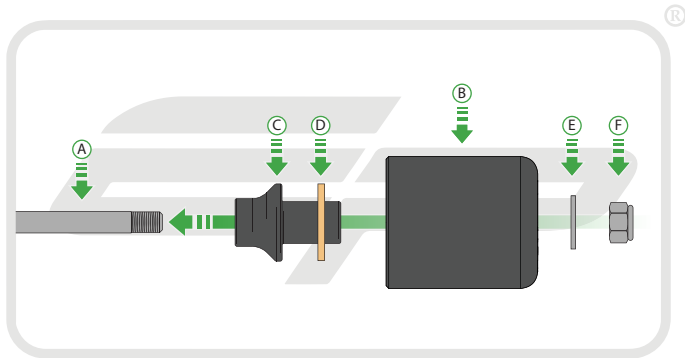

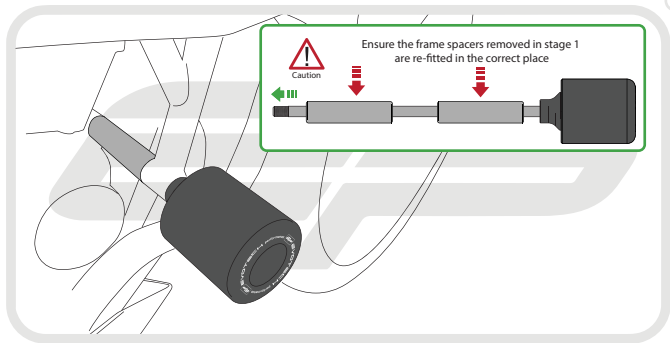

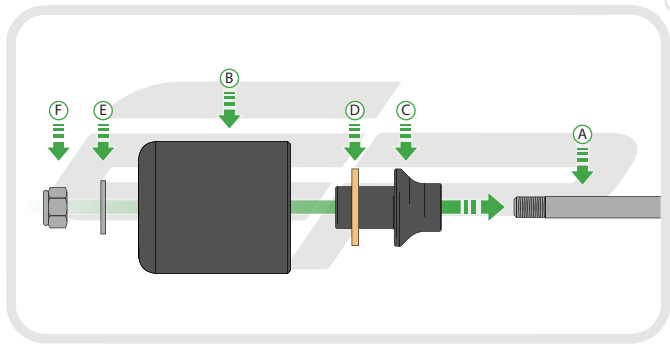

EVOTECH[®]
P E R F O R M A N C E



Caution

Manufacturers Torque
Specification
(Nm)



EVOTECH[®]
P E R F O R M A N C E



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com