



**EVOTECH**®  
P E R F O R M A N C E

**Installation Instructions**





## KTM 1290 SUPERDUKE GT TAIL TIDY


**Product Reference - 13248**


### Kit Contents


- |  |   |
|--|---|
| <b>A</b> 1 x Mounting Bracket          | <b>J</b> 2 x Indicator Screws           |
| <b>B</b> 1 x RH Arm                    | <b>K</b> 2 x Plastic Screws and Nuts    |
| <b>C</b> 1 x LH Arm                    | <b>L</b> 2 x Indicator Extension Wires  |
| <b>D</b> 1 x Licence Plate Bracket     | <b>M</b> 3 x M5 - 12 Cap Head Screws    |
| <b>E</b> 1 x Neoprene Gasket           | <b>N</b> 3 x M4 - 10 Button Head Screws |
| <b>F</b> 1 x M6 - 12 Countersink Screw | <b>O</b> 4 x M6 - 16 Button Head Screws |
| <b>G</b> 1 x M6 - 16 Trunion           | <b>P</b> 5 x Cable Ties                 |
| <b>H</b> 1 x M5 Plastic Cap            |   |
| <b>I</b> 2 x Indicator Stems           |   |

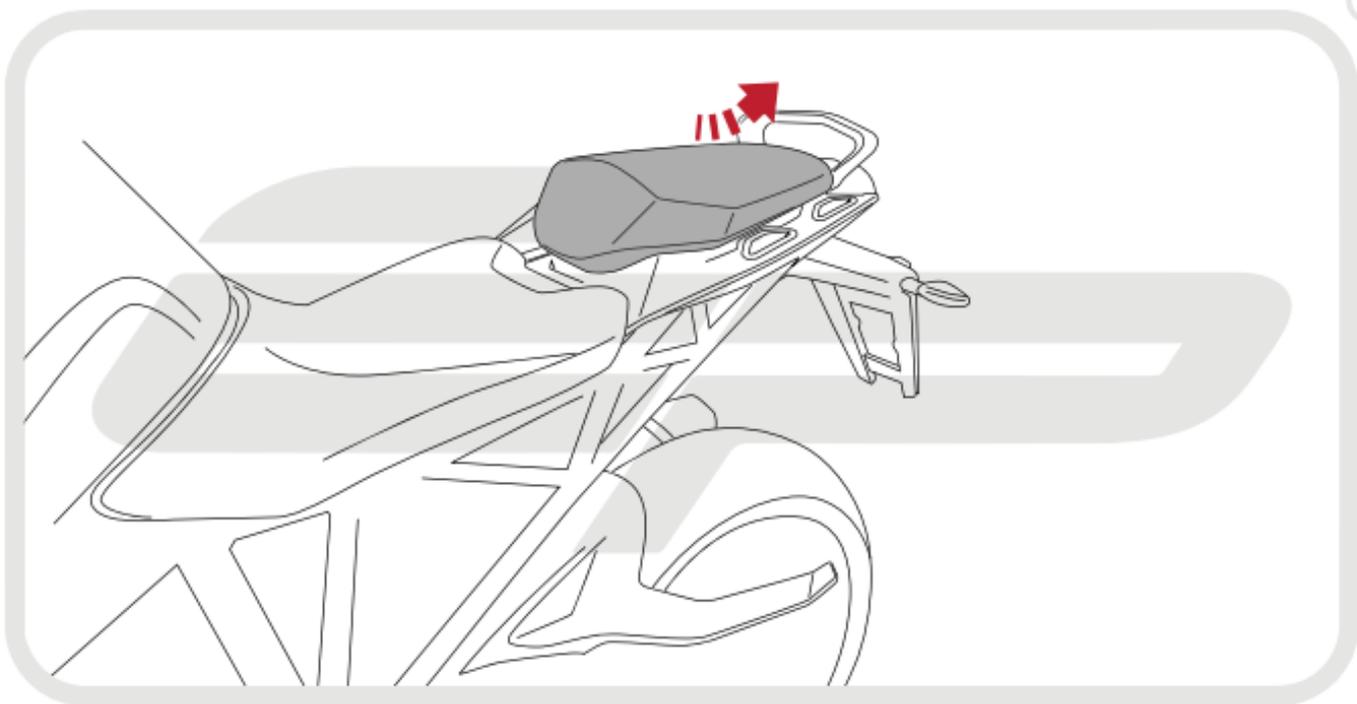


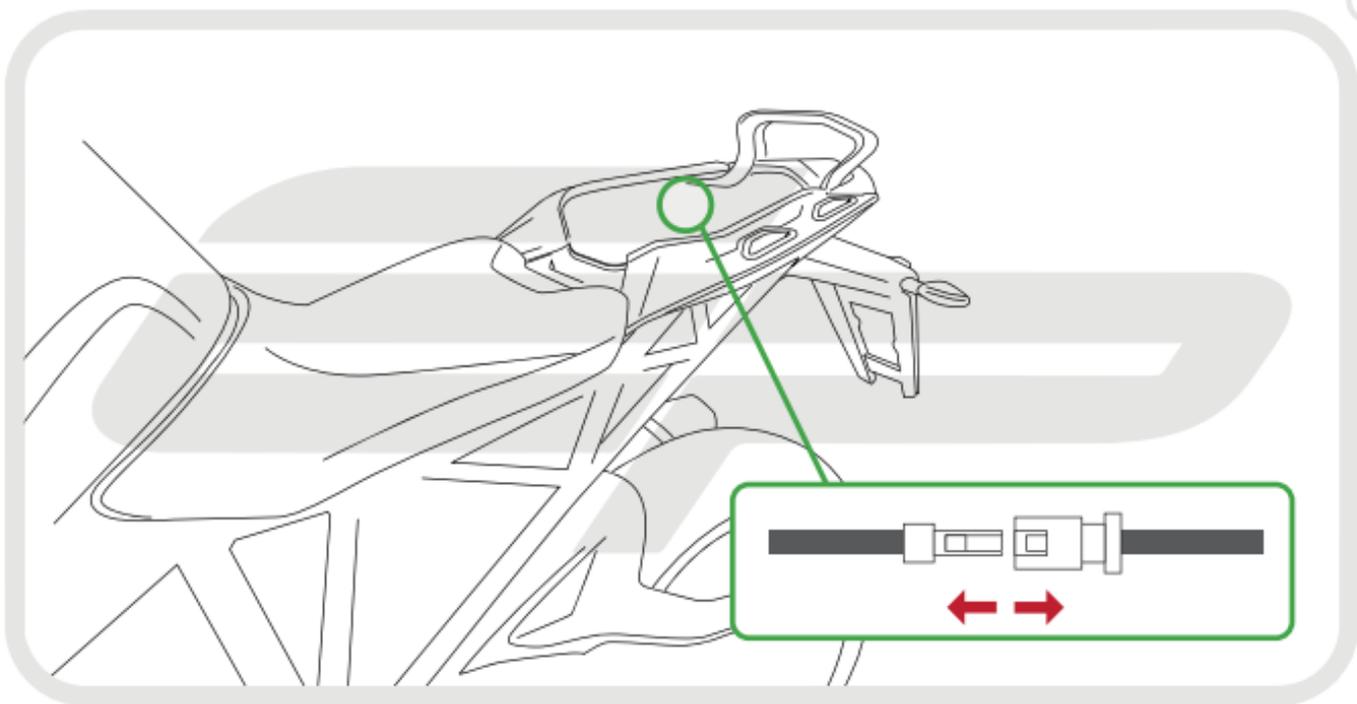


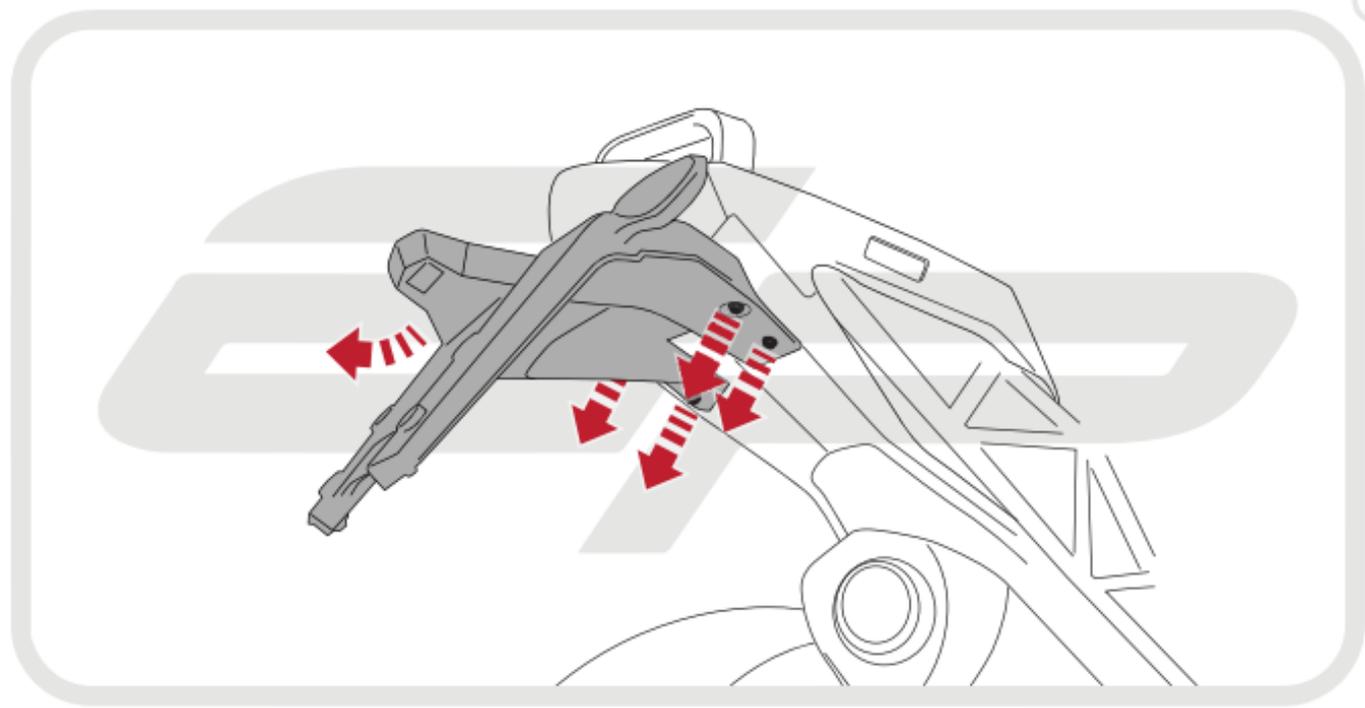


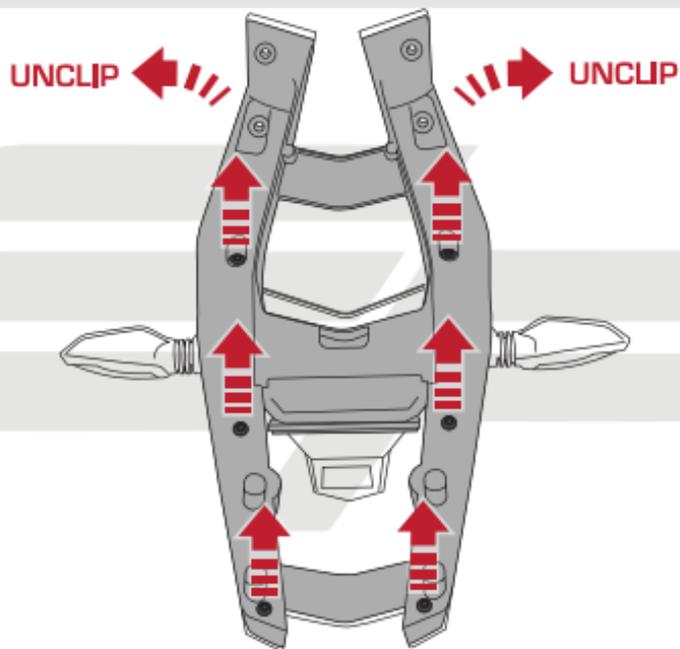

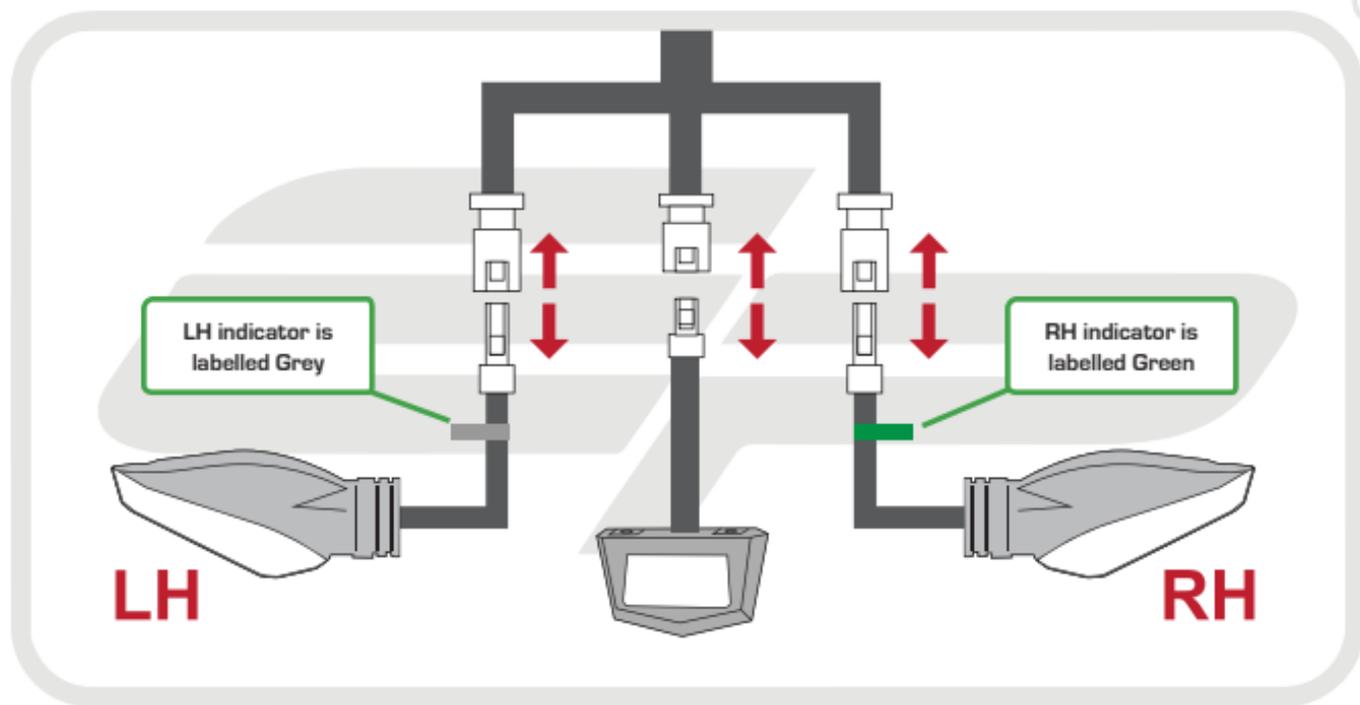


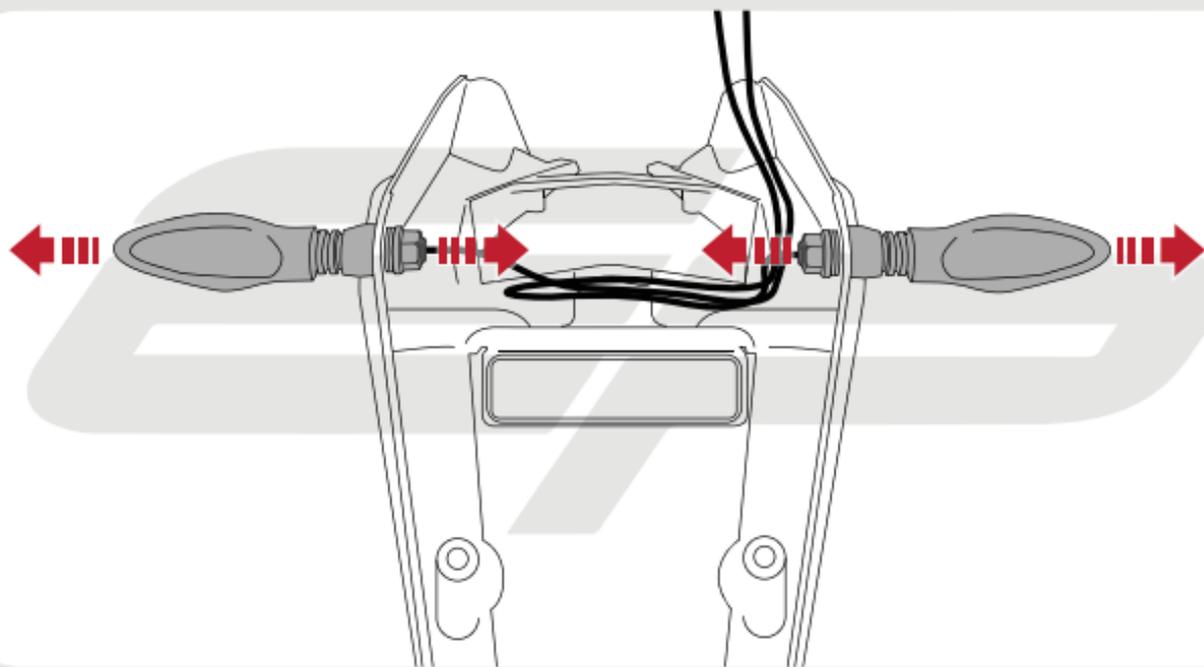

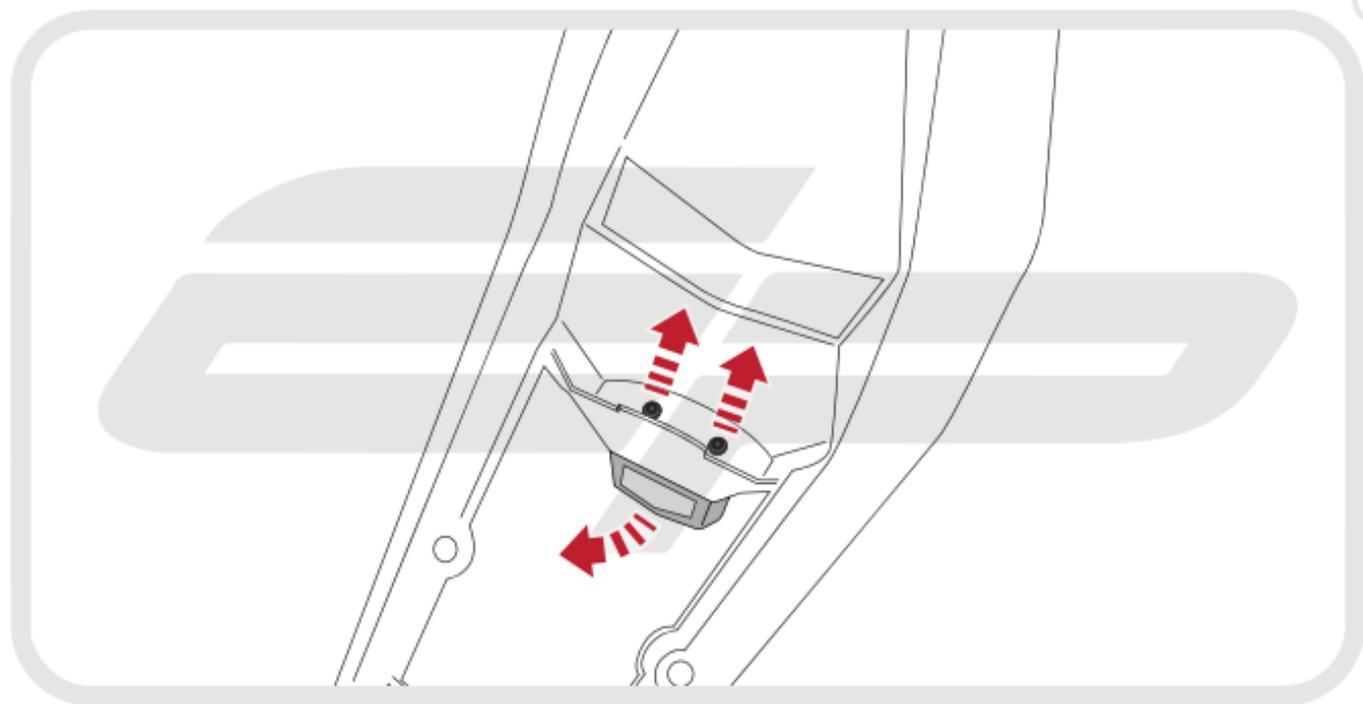


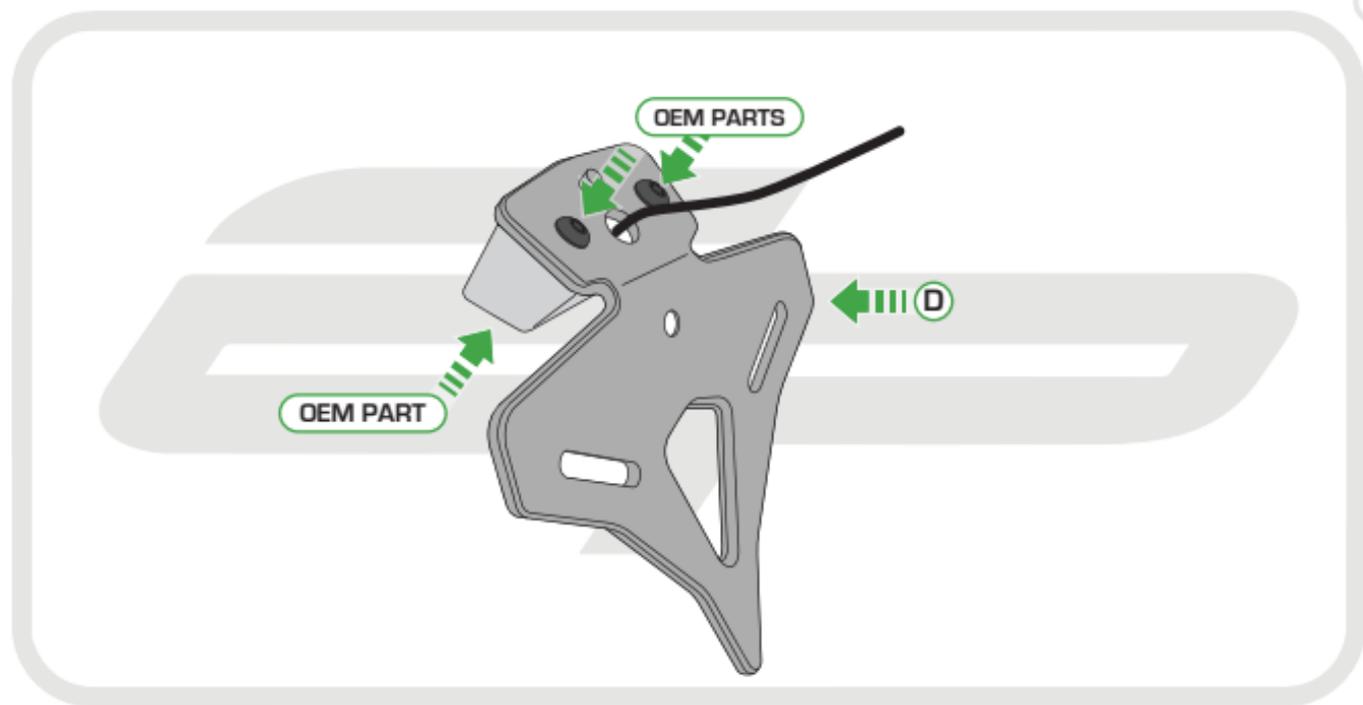




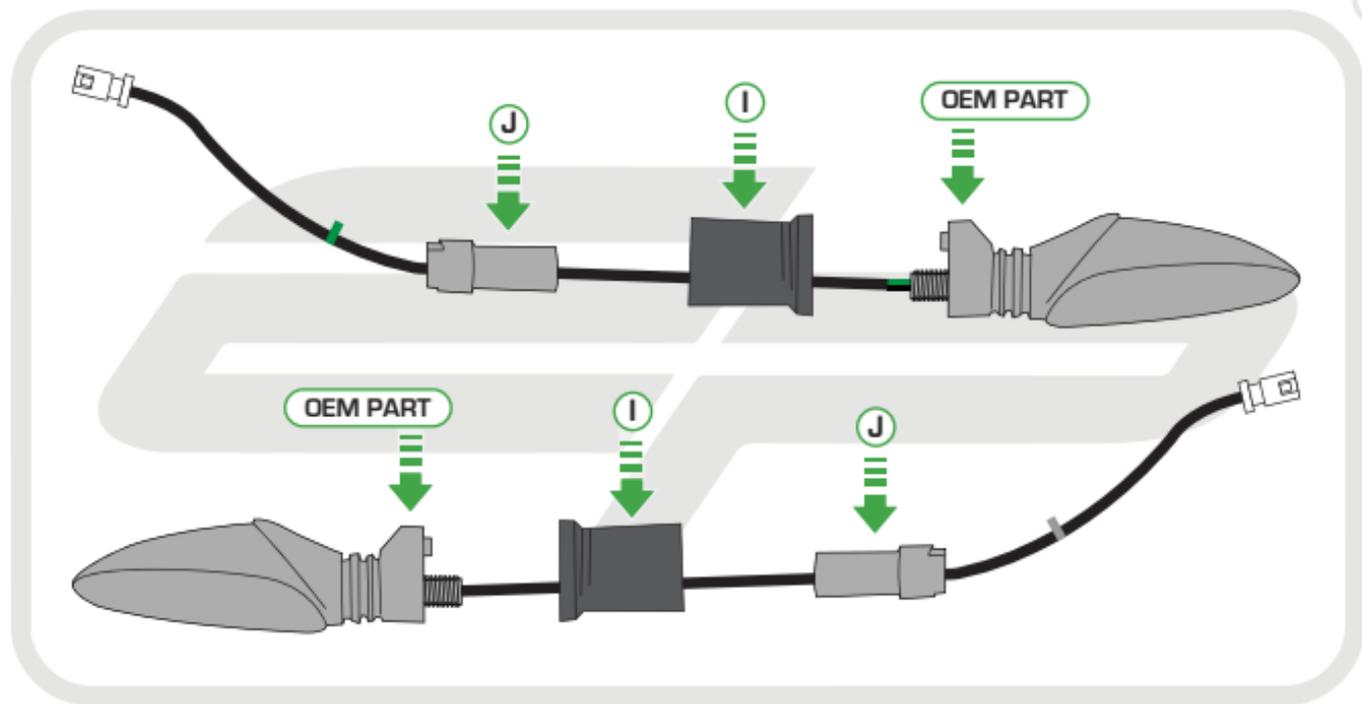

**EVOTECH**<sup>®</sup>  
P E R F O R M A N C E

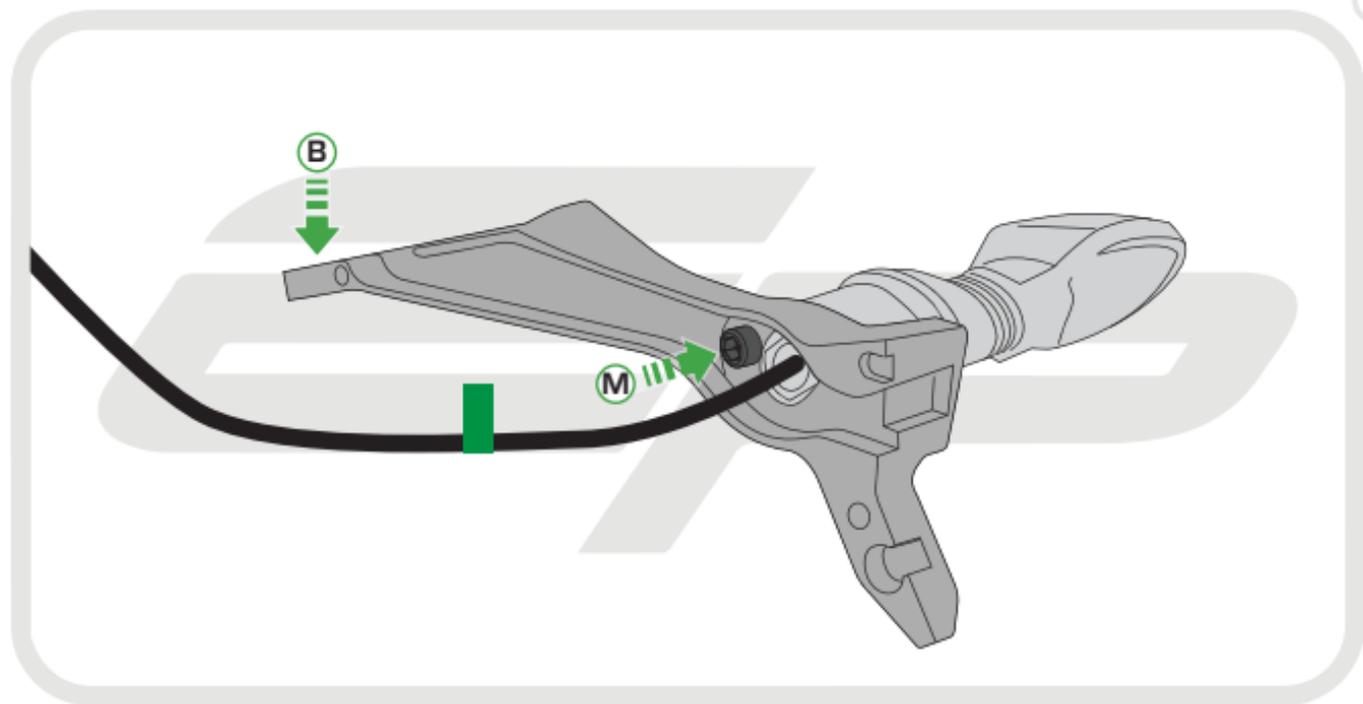


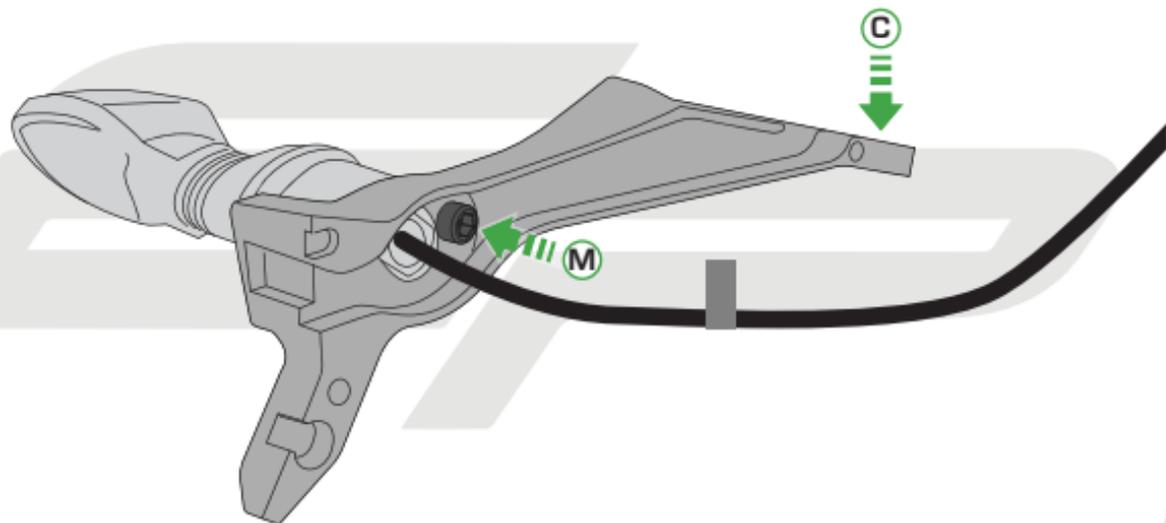




Caution

Ensure connectors are located  
at the top of both arms

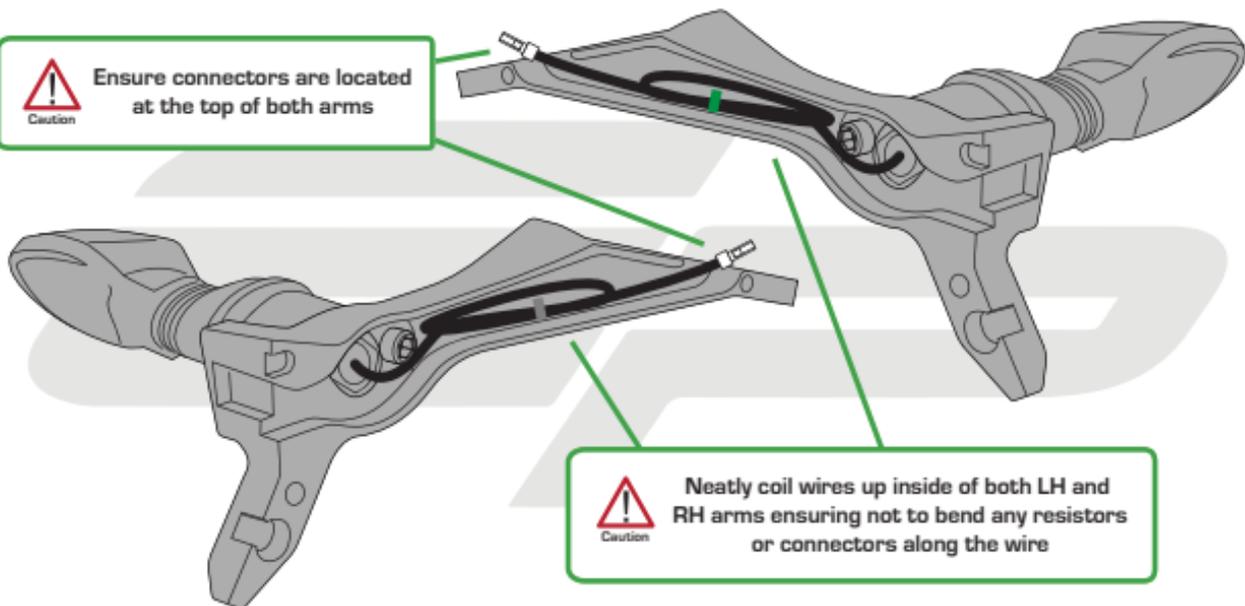

Caution

Neatly coil wires up inside of both LH and  
RH arms ensuring not to bend any resistors  
or connectors along the wire

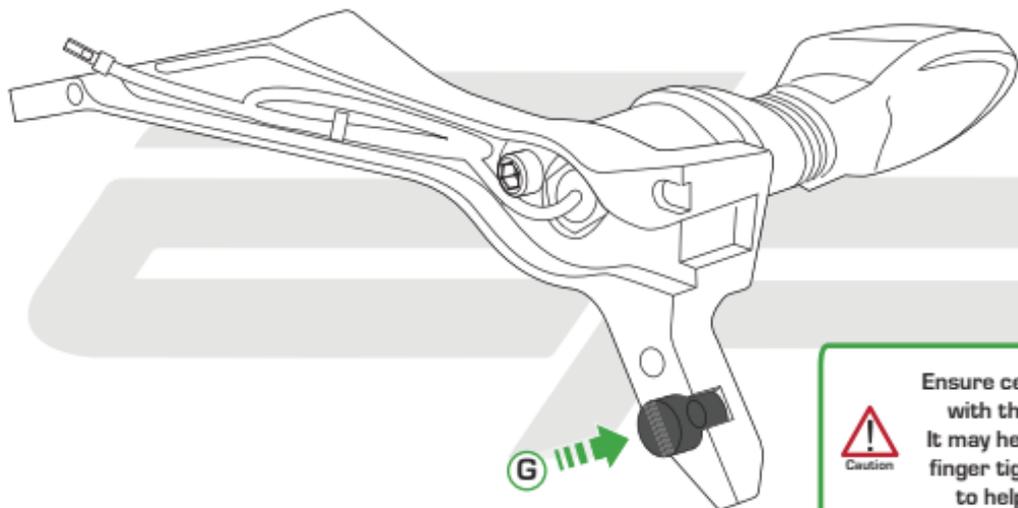


Caution

Ensure centre hole is aligned with the gap in the arm. It may help to place a screw finger tight into the trunion to help with alignment



Caution

Locate pin in the rear of the licence plate holder into the slot in the RH arm

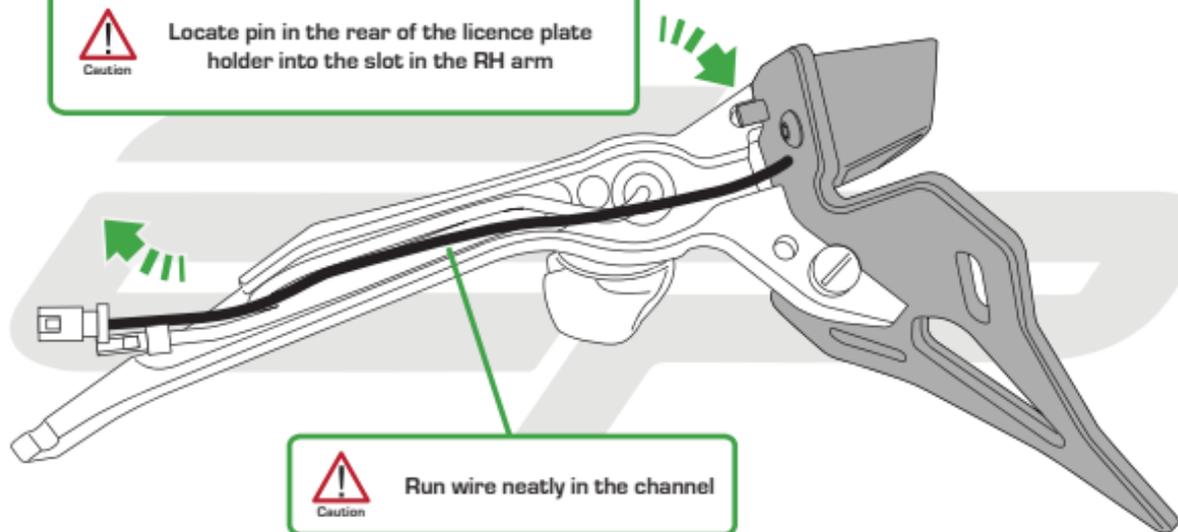


Caution


Run wire neatly in the channel





Caution


Bring LH and RH arms together  
ensuring wires site in the channels  
and do not get trapped

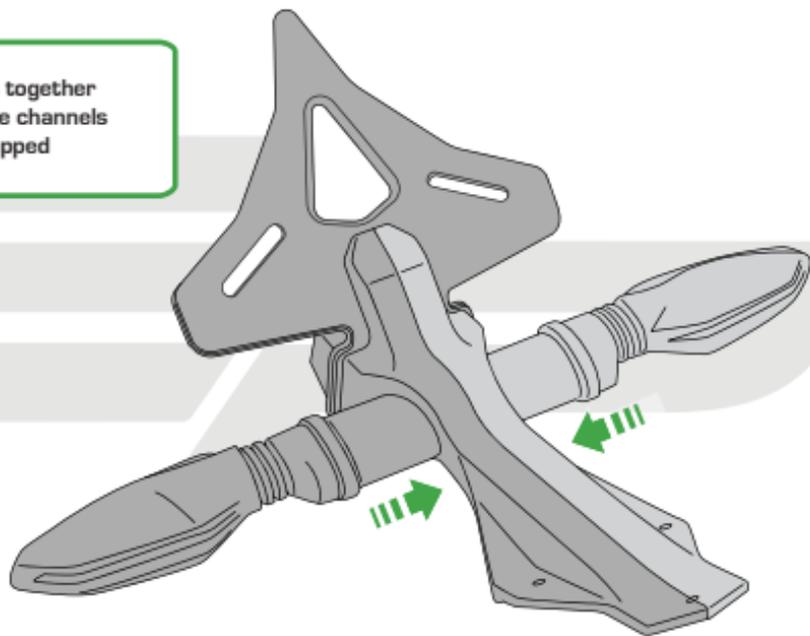


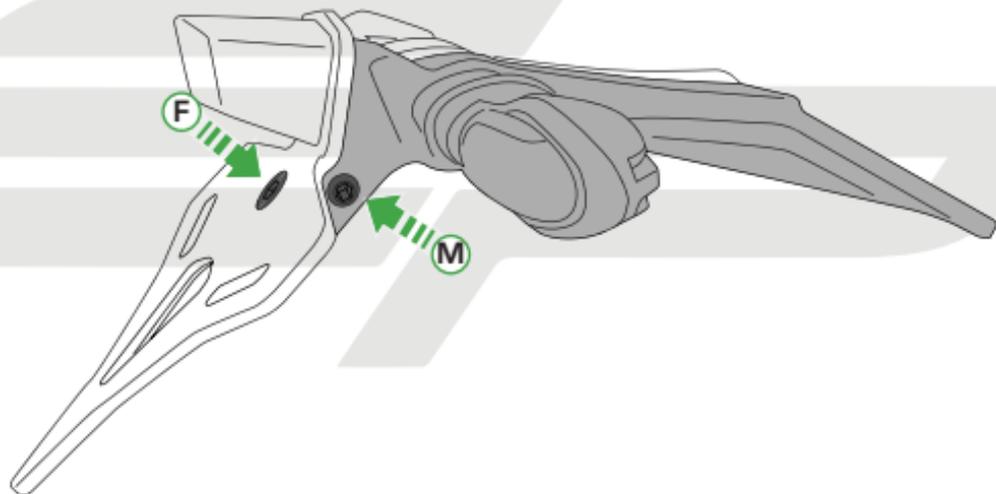

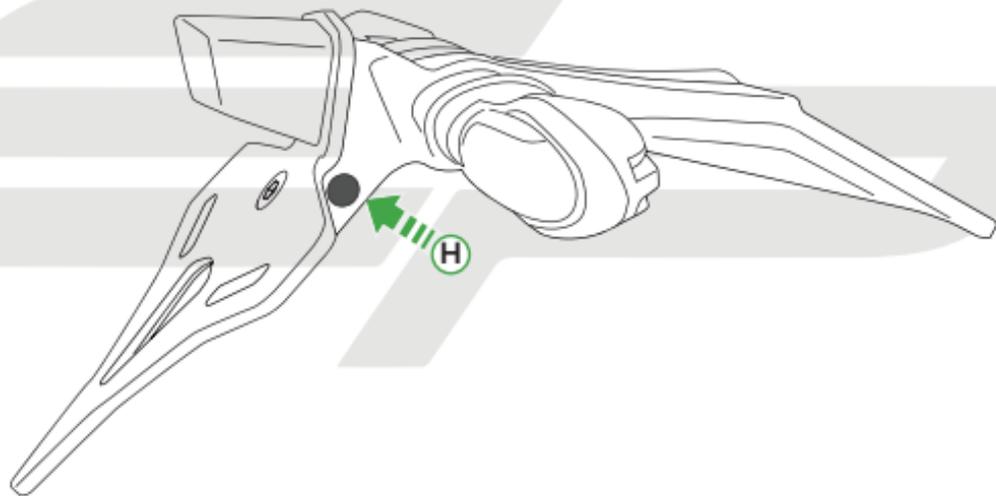

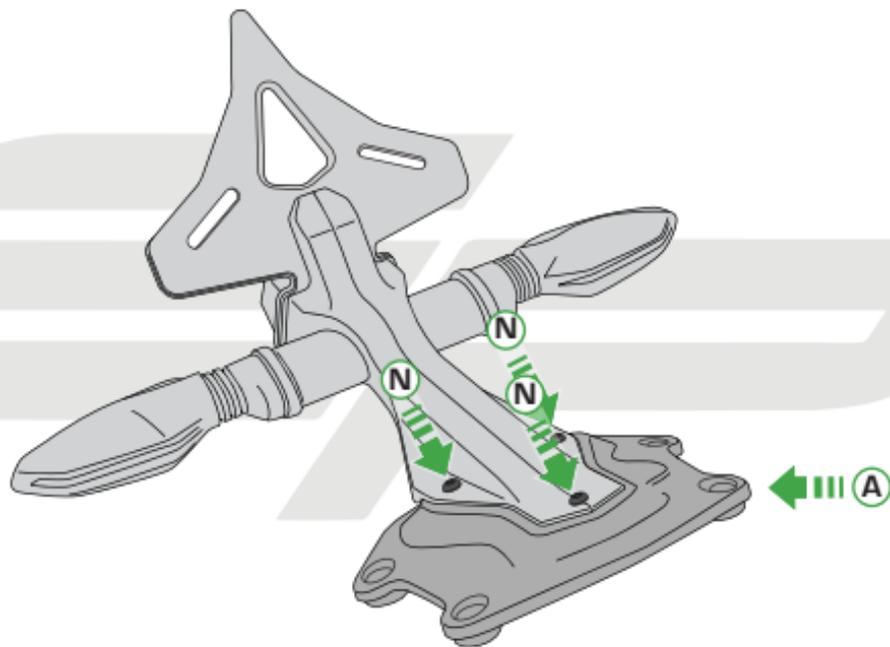


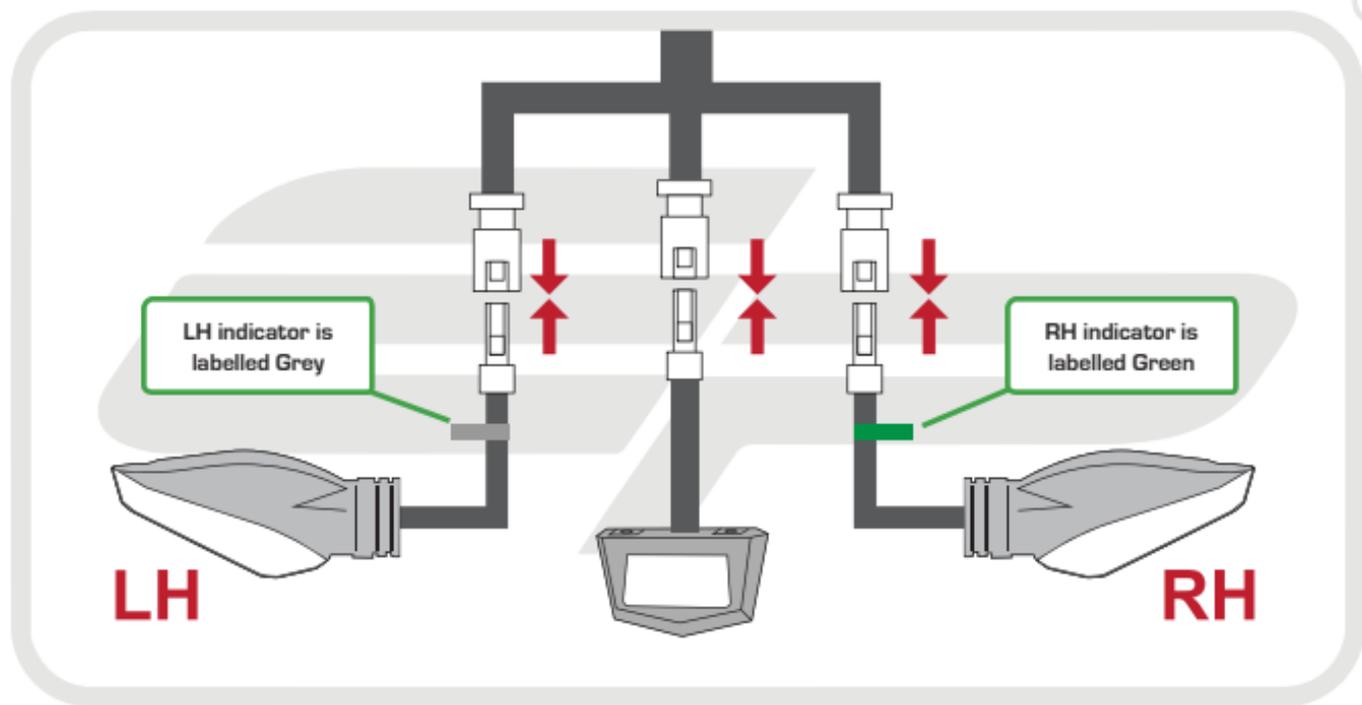

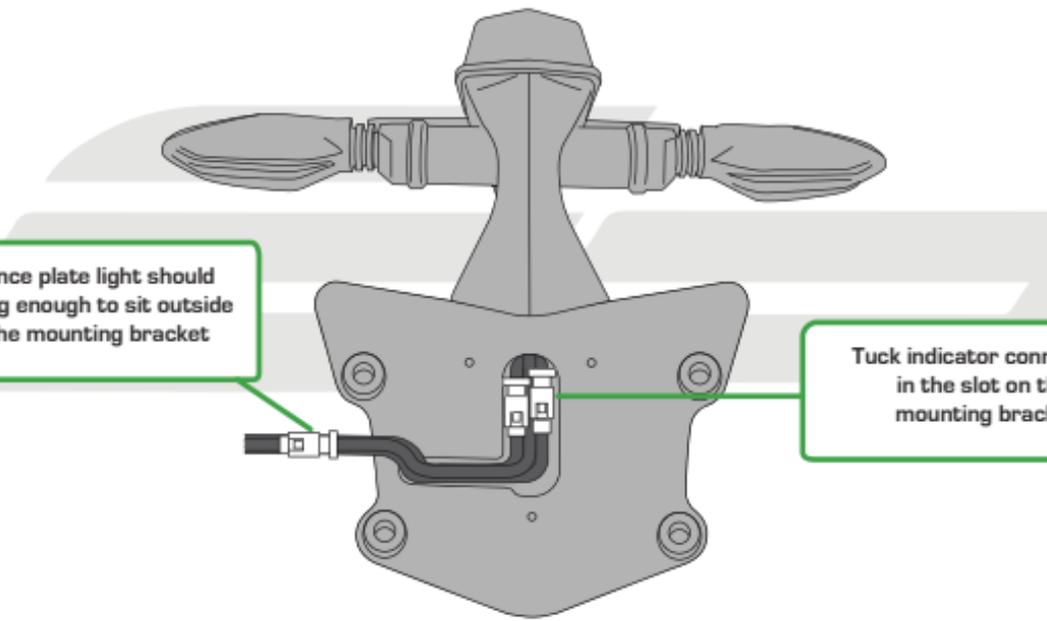

Licence plate light should be long enough to sit outside of the mounting bracket

Tuck indicator connectors in the slot on the mounting bracket

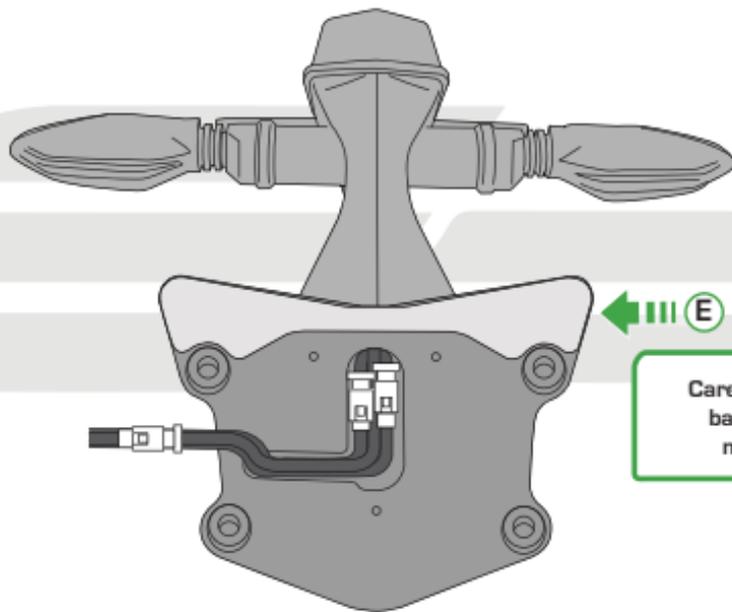

Carefully peel off yellow backing paper from neoprene gasket






Reverse Stage

2,1

## Reflector Bracket Installation

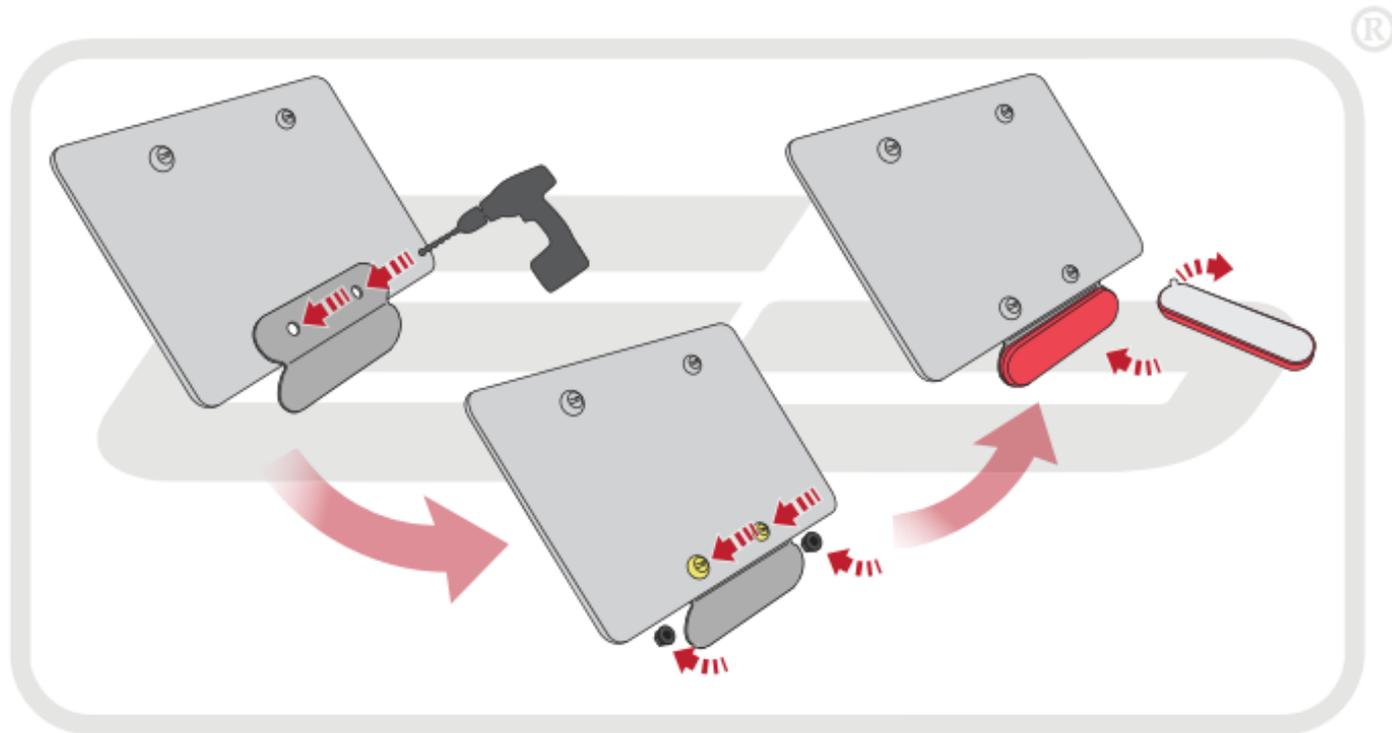

**EVOTECH**<sup>®</sup>  
P E R F O R M A N C E



### ESSENTIAL CHECKS



After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)