




BMW R NineT
Engine Guard


Installation Instructions





Kit Contents PRN014226


- (A) 1 x Spacer
- (B) 1 x M6 x 10mm Silver Button Head Bolt
- (C) 3 x M8 x 16mm Silver Button Head Bolt

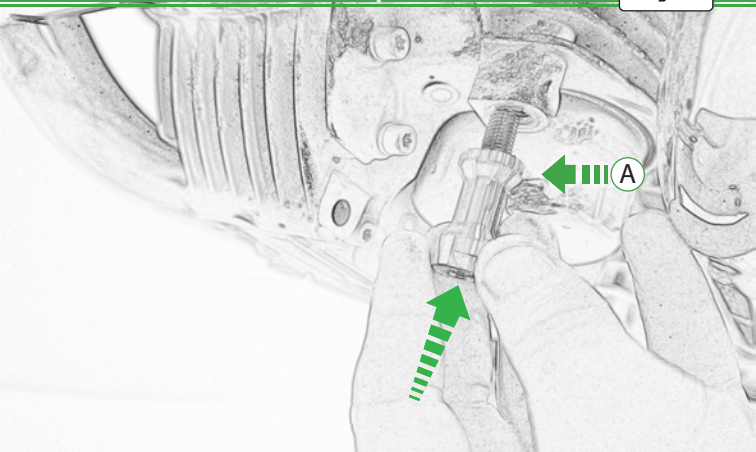

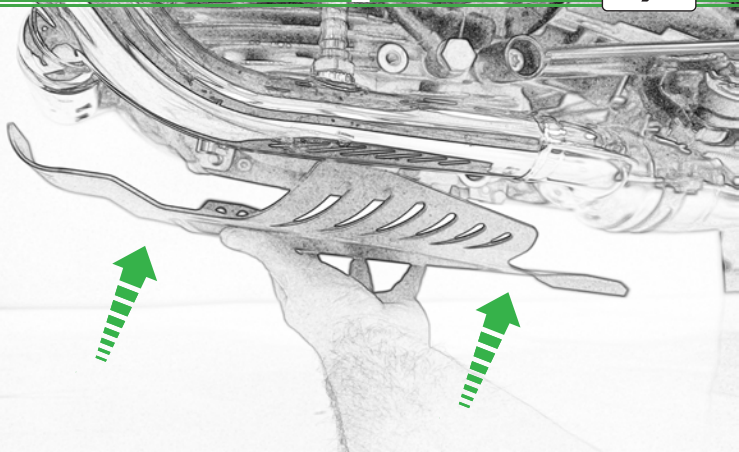

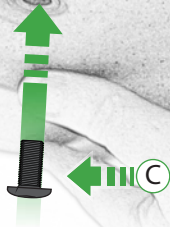

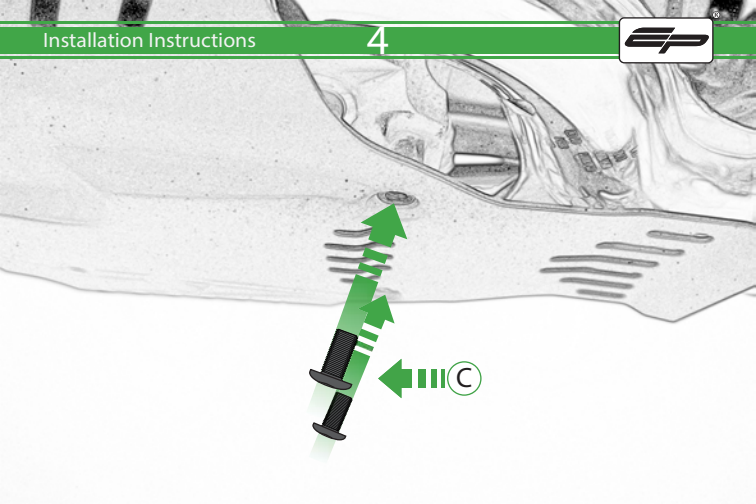

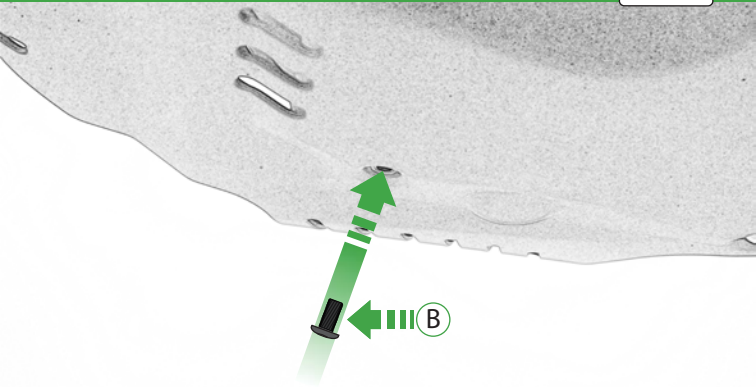



 **ESSENTIAL CHECKS** 

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH[®]
P E R F O R M A N C E

www.evotech-performance.com